

COSMOFINSTEEL FIXINGS


The standard Cosmofinsteel fixings are Hilti nylon anchors at 150 centres. If the structure is timber / FC sheet / plywood, the essential difference is only in the fixings, which will be suitable posidrive screws in lieu.

INSULATION (WHERE USED)

Where a soft substrate (insulation, lightweight concrete) exists below any existing membrane, Projex can advise the fixings to be employed.

FLASHINGS

The D5 detail is to be used whether there are existing flashings/cappings or not. Where flashings exist, bend them out of the way, fit the D5 minimum 25mm below and redress the existing flashing down.

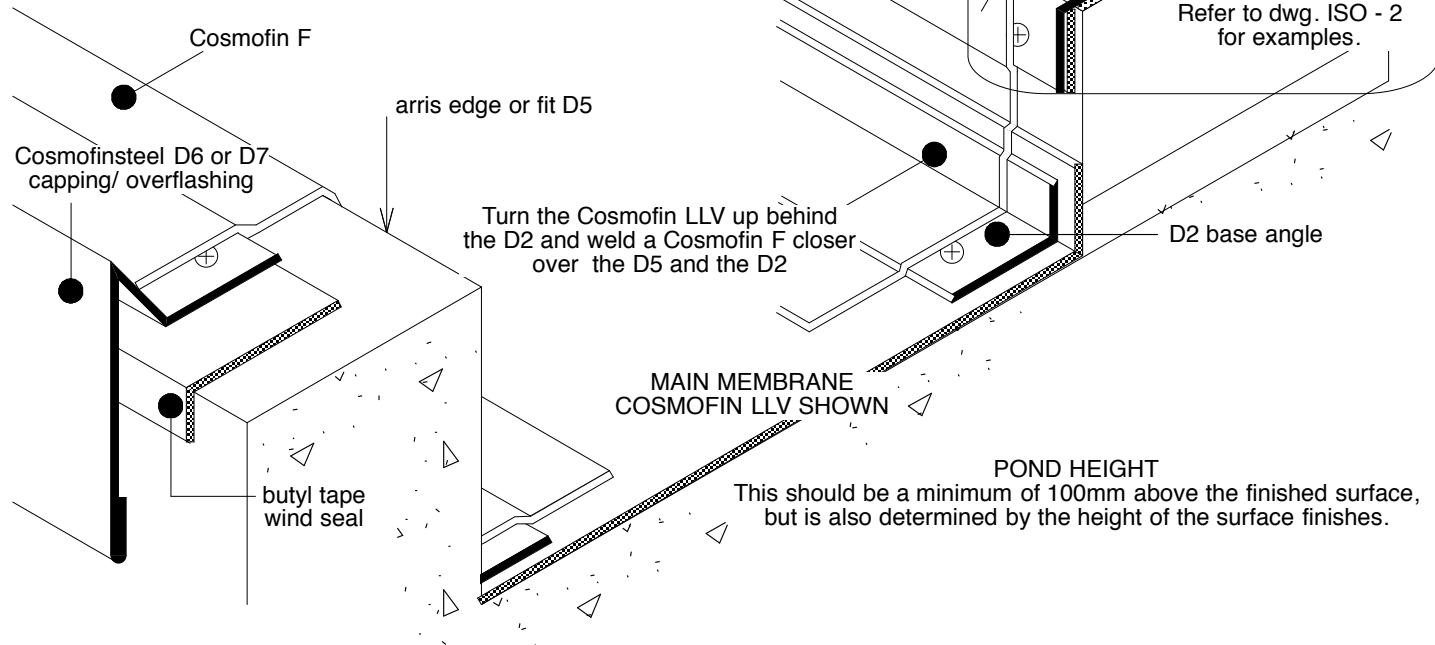

The designs and details shown herein are copyright and may not be used for any purpose other than Cosmofin detailing without the written permission of Projex Group Pty Ltd

PROJEX GROUP - CONCEPT/SHOP DWG.

TYPICAL TERMINATIONS
WALL (D5) AND PARAPET (D7)
New or retrofit to concrete or masonry

SCALE: 1:2

DATE: 2/12/15

DWG. No: ISO-D-1